


SIDE OPENING ELEMENT TRIM

Front side door trim: Removal - Refitting

72A

REMOVAL


OPERATION FOR REMOVAL OF PART CONCERNED

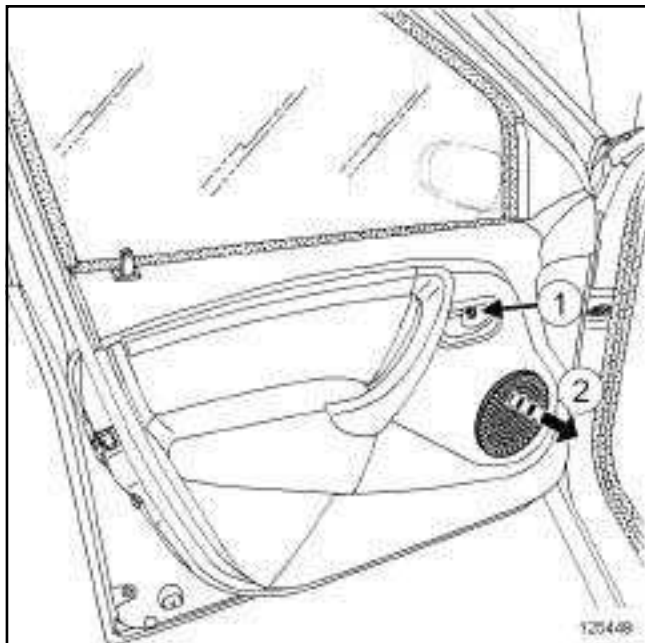

125449

❑ Remove:

- the bolt (1) ,
- the opening control,
- the speaker grille (2) .

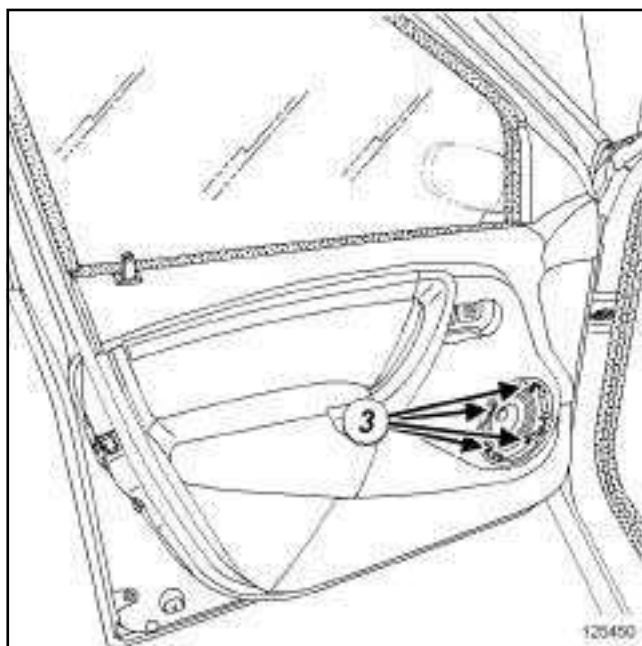


125450

❑ Remove:

- the bolts (3) ,
- the speaker.

❑ Disconnect the speaker connector.

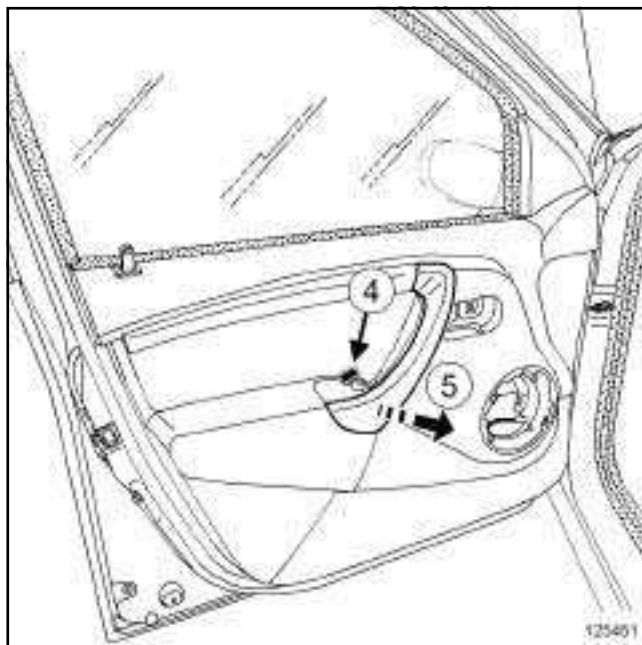

125451


❑ Unclip the trim (4) from the door trim bolt.

❑ Remove the cover from the interior handle (5) .

SIDE OPENING ELEMENT TRIM


Front side door trim: Removal - Refitting

72A

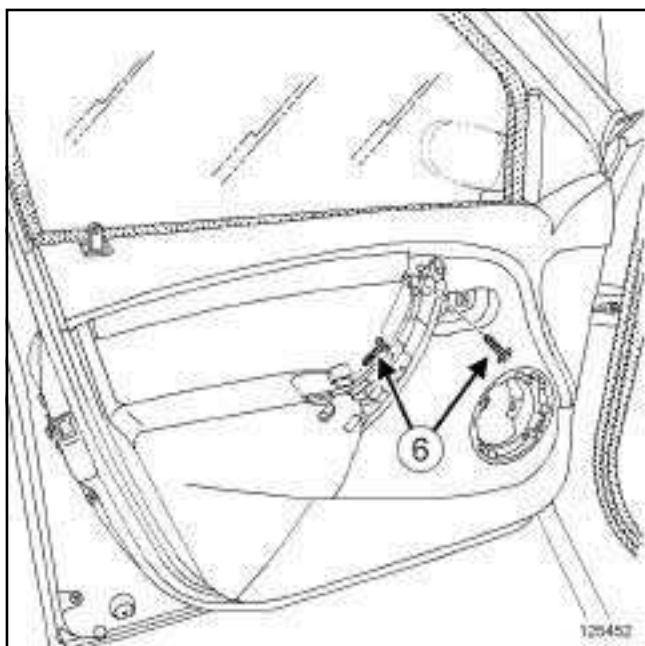

125452

- ❑ Remove the bolts (6) .

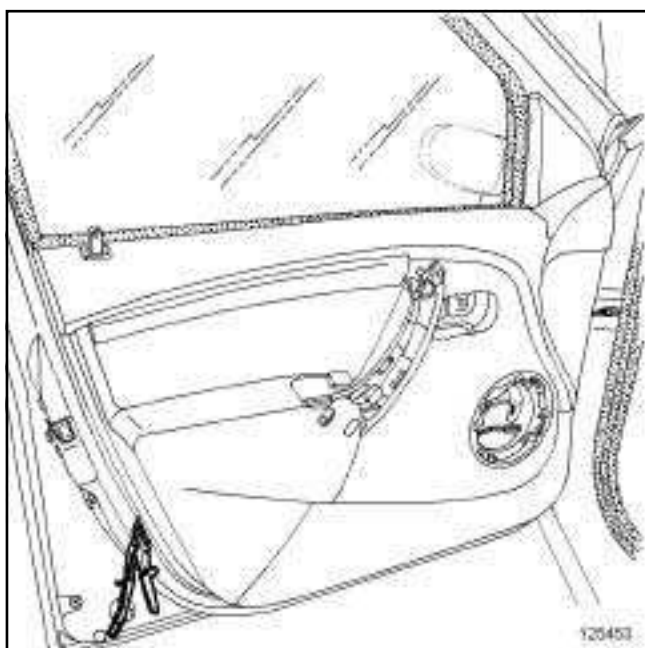

125453

- ❑ Unclip the front door trim using an unclipping tool.

REFITTING

I - REFITTING PREPARATION OPERATION

- ❑ If necessary, replace:
 - the front door trim clips,
 - the front door trim sealing mastic (part no.: **77 01 423 330**).

Note:

To make it easier to fit the trim, moisten the box section at the point where the seal is applied.

II - REFITTING OPERATION FOR PART CONCERNED

- ❑ Refit:
 - the front door trim,
 - the bolts (6) ,
 - the interior handle cover (5) ,
 - the trim (4) on the door trim bolt.
- ❑ Reconnect the speaker connector.
- ❑ Refit:
 - the speaker,
 - the speaker bolts (3) ,
 - the speaker grille (2) ,
 - the opening control,
 - the opening control bolt (1) .

SIDE OPENING ELEMENT TRIM

Rear side door trim: Removal - Refitting

72A

Special tooling required

Car. 1363 Set of trim removal levers.

REMOVAL


I - REMOVAL PREPARATION OPERATION

❑ Remove:

- the rear side door interior handle (see **Rear side door interior opening control: Removal - Refitting**) (51A, Side opening element mechanisms).
- the rear side door window winder handle (see **Rear side door window winder handle: Removal - Refitting**) (51A, Side opening element mechanisms).


II - REMOVAL OPERATION

EQUIPMENT LEVEL E2

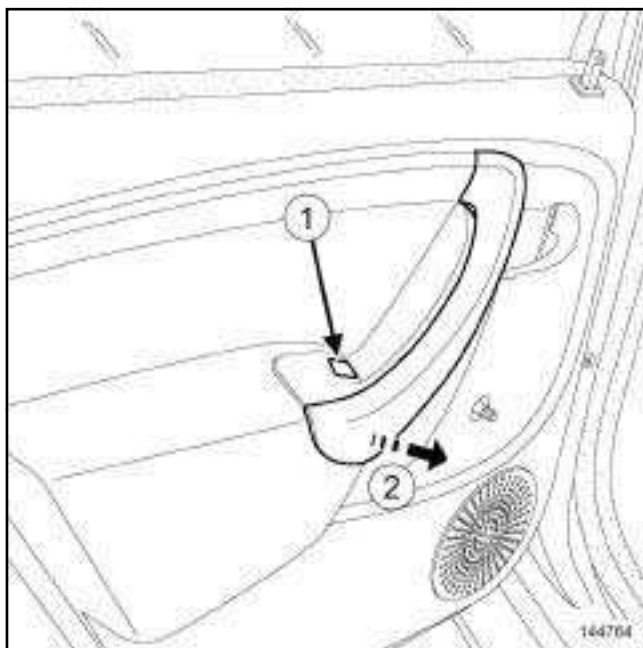


144764

- ❑ Unclip the blanking cover of the rear side door trim bolt (1) .
- ❑ Remove the rear side door interior handle cover using the tool (**Car. 1363**) by (2) .

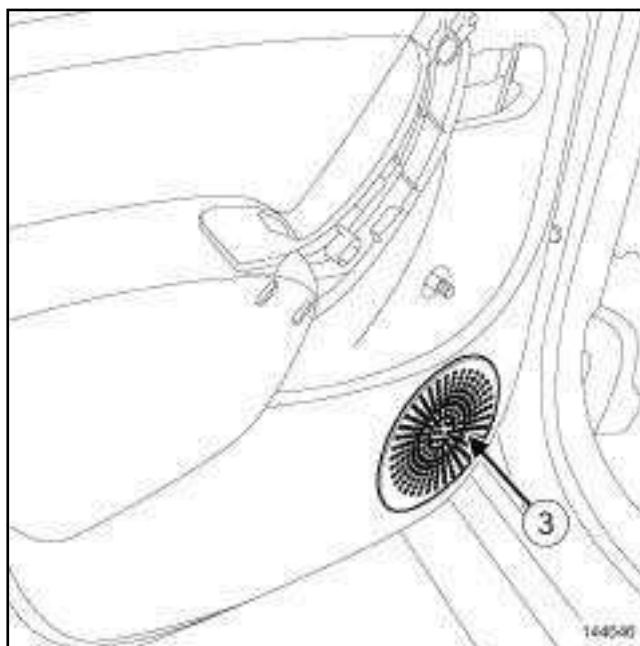

144646

- ❑ Remove the speaker grille (3)

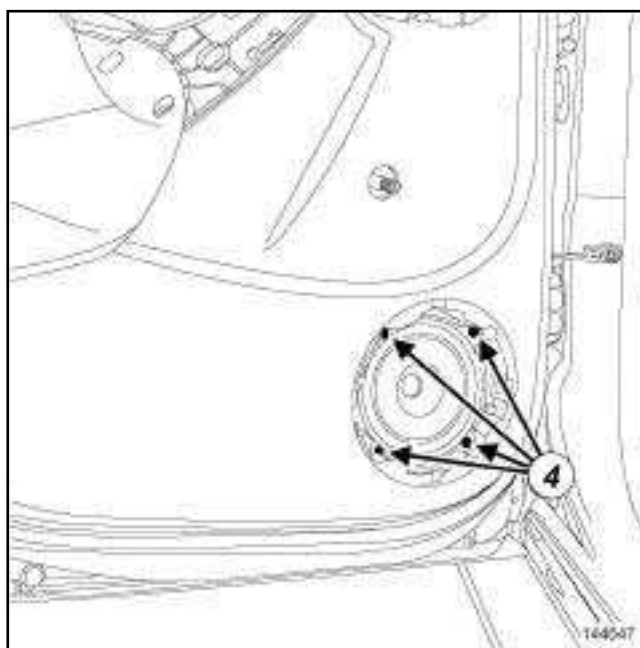

144647

- ❑ Remove:
 - the speaker bolts (4) ,
 - the speaker.
- ❑ Disconnect the speaker connector.